



Product Information

Product Name: Chuzhao Retro Camera

Product Functions: Photo/Video Input: 5V=2A

Maximum Expandable Storage: 64GB Main Material: ABS

Screen Size: 1.54-inch IPS HD Display

Charging Time: Approximately 1-3 hours

Features

- 1. Fully automatic photo mode with auto-focus, color adjustment, and light correction – no need to adjust parameters, making it easy to use.
- 2. You can frame and capture photos using the LCD display, and store the photos on a Micro SD card.
- 3. Retro minimalist design.

Product Contents



Camera *1



User Manual *1




Lanyard *1



USB Cable *1

CLASSIC BUT MORE

Component Description

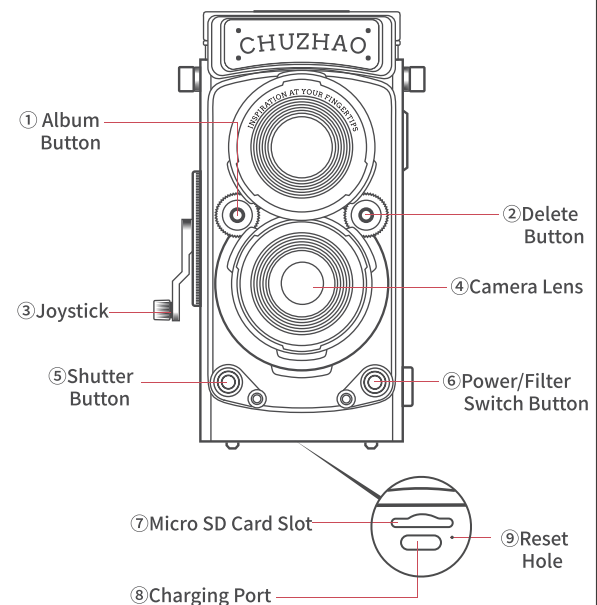

CLASSIC BUT MORE

Button Functions

- Album Button**
Press this button to enter the album. Press the shutter button to exit the album.
- Delete Button**
Press this button to select a photo you want to delete in the album interface. Press the shutter button to confirm and delete the selected photo.
- Joystick**
Turn the joystick to start recording video. When you stop moving the joystick, recording will pause after 6 seconds.
- Camera Lens**
Do not cover the camera lens while taking photos. Ensure the composition is correct before taking a picture.
- Shutter Button**
After powering on, press this button to take a photo. Press and hold to start recording a video. Press again to stop recording.
- Power/Filter Switch Button**
Press and hold this button to turn the camera on. Press and hold again to turn it off while in standby mode. In shooting mode, press this button to switch between black and white/color modes.

CLASSIC BUT MORE

7 Micro SD Card Slot

Insert the Micro SD card into the card slot in the correct orientation. Once properly inserted, the Micro SD card should sit flush with the body of the camera. (Note: Micro SD card must be purchased separately.)

8 Charging Port

Use a 5V USB charger to charge the camera. Connect it to a computer's USB port to transfer photos and videos.

9 Reset Hole


If the camera malfunctions, do not attempt to disassemble it. Use a needle or pin to press the reset button to restore the camera to its default settings.

- If the camera is not functioning properly, press the reset button to restore it.
- Turn off the camera before charging.
- If the camera is left idle for a period of time, it will automatically turn off. If this happens, simply turn the camera back on to use it again.


CLASSIC BUT MORE

Shooting

1. Turn on the power.
2. Hold the camera.
3. Adjust the composition according to your preferences.
4. The camera will automatically focus when taking a photo. Once the photo is taken, it will be saved to the storage card.

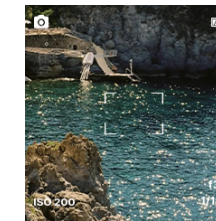

(Focusing - White)

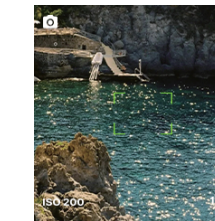

(Focus Complete - Green)

Charging and File Transfer to Computer



1. Use a 5V USB charger to charge the camera. Be sure to turn off the camera before charging.
2. Connect the camera to a computer's USB port to access and transfer photos and videos.

CLASSIC BUT MORE

Warnings:

1. The camera contains a built-in 3.7V lithium battery that is non-removable and non-replaceable. If damaged, please contact customer service for repairs.
2. Regularly check the charger's cable, plug, casing, and other components for any damage. If any damage is found, stop using the charger until it has been repaired.
3. The charger is not a toy. The charger is not a toy. The camera should only be charged with the recommended charger (5V=2A).
4. The charger should be used by adults or under adult supervision.
5. Do not clean this toy with liquid.
6. This product contains small parts and is not suitable for children under 3 years old.
7. Do not dispose of the toy carelessly, as it may harm the environment. Please recycle it properly.
8. This manual contains important information; please keep it for future reference.

CLASSIC BUT MORE

製品仕様

製品名: レトロカメラ	型番: M1
最大拡張可能: 64GB	入力: 5V/2A
主な材質: ABS	画面サイズ: 1.54インチ
充電時間: 約1-3時間	

セールスポイント

- 全自動写真撮影モードを搭載しており、フォーカスの設定、色の調整、光の調整を自動で行うことができます。パラメータを調整する必要がなく、操作が簡単です。
- LCDディスプレイを通して写真をフレーム化し、MicroSDカードに保存できます。
- レトロでシンプルなデザイン。


セット内容



カメラ本体*1 取扱説明書*1 ストラップ*1 充電ケーブル*1

CLASSIC BUT MORE

各部の名称

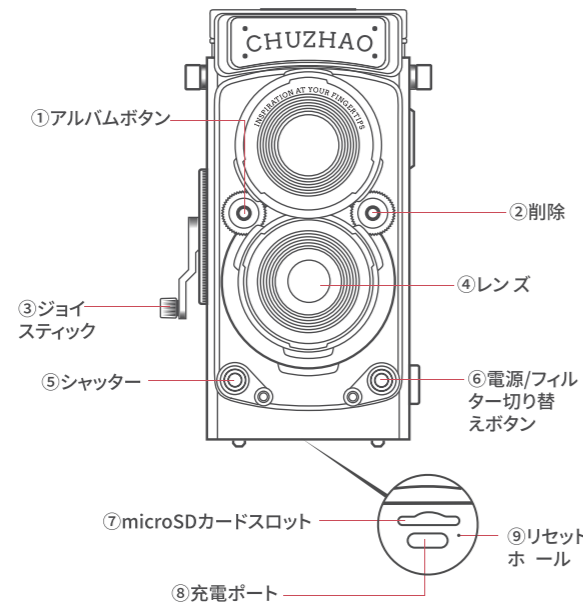

CLASSIC BUT MORE

ボタンの説明

- ① アルバムボタン
このボタンをクリックするとアルバムに入り、シャッターをクリックするとアルバムを終了します。
- ② 削除ボタン
このボタンをクリックして、アルバム インターフェイスで削除する写真を選択し、を押して削除を確認します。
- ③ ジョイスティック
ジョイスティックを回すと録画が開始されます。ジョイスティックの回転を止めると、6秒後に録画が停止します。
- ④ レンズ
写真を撮るときはレンズを遮らず、構図を確認してから撮影してください。
- ⑤ シャッター
電源をオンにした後、このボタンをクリックして写真を撮ります。長押しすると録画が開始され、もう一度クリックすると録画が停止します。
- ⑥ 電源/フィルタースイッチボタン
このボタンを長押しすると電源がオンになり、スタンバイモードで長押しすると電源がオフになります。撮影モードでは、短く押すと白黒/カラーモードが切り替わります。

CLASSIC BUT MORE

- ⑦ Micro SDカードスロット
Micro SD カードを正しい方向でメモ리카ードスロットに挿入します。正しく取り付けられると、Micro SD カードは本体と面一になります。
- ⑧ 充電ポート
5V充電器のUSBポートを使用して充電できます。コンピューターのUSBポートに接続して、キャプチャした写真やビデオを読み取ります。
- ⑨ リセットホール
カメラが故障した場合は、自分で分解しないでください。リセットボタンを鋼針で軽く押ししてリセットします。


使用上の注意

- 商品を受け取ったときや長期間使用していなかったときは、使用前にカメラを完全に充電してください。
- 充電する前にカメラの電源を切ってください。
- カメラの電源を入れた後、一定時間何も操作しないと自動的に電源が切れます。
- ご使用中は接続部分がしっかりしているか定期的または不定期にご確認ください。
- 異常が発生した場合は、本製品を分解したり、改造したりしないでください。
- 再起動しても問題が解決しない場合は、弊社アフターサービス担当者までご連絡ください。


CLASSIC BUT MORE

撮影スキル

- 1.電源を入れます。
- 2.カメラを構えます。
- 3.個人のニーズに応じて構成を決定します。
- 4.写真を撮るときに自動的にフォーカスし、写真を撮った後、メモ리카ードに保存されます。

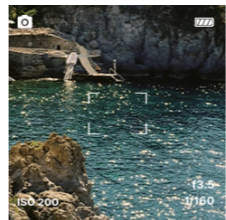

(フォーカス-白)

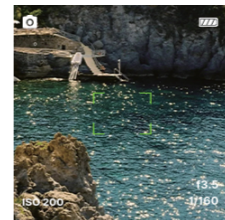

(フォーカス完了-緑)

充電とファイル転送の手順



付属のUSBケーブルを使用してカメラをパソコンに接続することで、写真や動画のファイルをパソコンにインポートし、管理・編集することができます転送手順。

CLASSIC BUT MORE

注意事項:

- 1.3.7Vリチウム電池が内蔵されており、取り外しや交換はできません。破損した場合は、修理サービスにご連絡ください。
- 2.充電器のコード、プラグ、ケース、その他の部品に損傷がないか定期的に確認してください。損傷が見つかった場合は、修理されるまで使用を中止してください。
- 3.充電器はおもちゃではありません。推奨充電器(5V=2A)のみ使用できます。
- 4.充電器は大人が使用するか、大人の監督の下で使用してください。
- 5.この製品は液体で洗浄できません。
- 6.この製品には小さな部品が含まれているため、3歳未満のお子様には適していません。
- 7.本製品を無造作に廃棄すると環境に影響を及ぼす恐れがありますので、適切にリサイクルしてください。
- 8.このマニュアルには重要な情報が記載されていますので、今後の参照用に保管してください。

CLASSIC BUT MORE



CLASSIC BUT MORE | CHUZHAO | CLASSIC BUT MORE